


Merrychef panini press cleaning guide

compatible with conneX®16, conneX®12 and eikon® e2s

IMPORTANT: !

A daily cleaning routine will ensure that you comply with the required hygiene standards, as well as help maintain the efficiency of your Merrychef oven.

It is very important to cool down the panini press before cleaning.

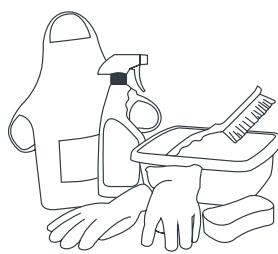

You will need

- Merrychef® Oven Cleaner
- Merrychef® Oven Protector
- Protective rubber gloves
- Red hard bristle brush
- Red scraper
- Non-abrasive nylon scrub pad
- Cleaning towel and cloths
- Eye protection
- Heat proof gloves (optional)
- Dust mask (optional)



conneX® 16



conneX® 12



eikon® e2s

X16/X12/e2s panini press cleaning



! Follow the oven cleaning procedure and ensure both the oven and panini press are cooled down before removing the panini press.



Lift the upper grill plate away from the lower plate to separate the two halves of the press insert.



Remove the two white side guides and clean carefully in warm soapy water. Inspect for damage and immediately replace if damaged. NOTE: Discoloration will naturally occur over time.

! DO NOT USE ABRASIVES ON THE SIDE GUIDES OR CAUSTIC CHEMICALS.



With the side guides removed, wash the upper grill plate in warm soapy water, using a soft cloth or non-abrasive sponge.

Optional you can also use a hard brush to remove debris.

! DO NOT USE ABRASIVES ON THE TOP GRILL PLATE OR CAUSTIC CHEMICALS.

NOT SUITABLE FOR DISHWASHER CLEANING



The lower plate should be washed in warm soapy water, using a soft cloth or non-abrasive sponge.



In the event of burnt on debris, this should be removed carefully using a hard brush or plastic scraper. Avoid aggressive abrasion of the plate.




! DO NOT USE ABRASIVES ON THE SIDE GUIDES OR CAUSTIC CHEMICALS.



Optional, the lower plate can be cleaned in a dishwasher on a low temperature wash, but only with non-caustic cleaners.

NOTE: It is natural for the lower plates surface to season and absorb oils during the cooking process, staining of this plate is therefore expected.

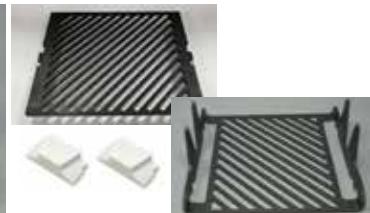

Allow all parts to air dry or dry with a clean dry cloth.



Reassemble the side guides onto the upper grill plate and then lower the upper grill assembly into the lower plate.



Return the complete panini press insert back to the oven.



Wipe the panini press paddle with a clean soft cloth in clean warm water and dry with a dry soft cloth.



WARNING:

A daily cleaning routine will ensure that you comply with the required hygiene standards, as well as help maintain the efficiency of your Merrychef oven.



It is very important to cool down the oven before cleaning.

MERRYCHEF®

For more information please visit www.merrychef.com/videos