



pro.equip

---



User Guide

# FOOD WARMER

ESM12 / 4007085

---

Proudly Distributed By

**New Zealand**  
Southern Hospitality  
[southernhospitality.co.nz](http://southernhospitality.co.nz)  
NZBN - 9429039301956

**Australia**  
Reward Hospitality  
[rewardhospitality.com.au](http://rewardhospitality.com.au)  
ABN - 40010183669



## TABLE OF CONTENTS

General Precautions.....	4
Specifications.....	5
Operation.....	6
Safety Notes.....	6
Cleaning.....	7

**This instruction booklet contains important advice for operation and maintenance. Please keep the booklet in a safe place for future reference.**

## GENERAL PRECAUTIONS—IMPORTANT

**Please read carefully the following instructions before using the food warmer.**

- It is advisable to keep the operating instructions in a place where you have them always ready on hand.
- Should you pass the appliance to a third party, these operating instructions should be handed over.
- As soon as you have unpacked the food warmer, check whether everything is in a faultless condition. Should anything be damaged, do not connect the appliance as such, but inform your dealer.
- Dispose the packing material according to your local regulations. All the packaging items (plastic bags, cardboard, polystyrene foam, nails, etc.) must not be left within reach of children, as they are potential sources of danger.
- Before connecting the appliance, make sure that the tension indicated on the identification plate agrees with the tension on your electricity mains.
- The unit is manufactured for commercial use, improper use may cause damage and will void the warranty.
- In case of fault and/or malfunction, switch the appliance off. Pull the power plug and inform your dealer, they will arrange to carry out the repair.
- Please observe the local regulations concerning accident prevention and disposal.
- The manufacturer/dealer cannot be made responsible for damages which arise through not observing these operating instructions. Apart from this, if these instructions are not observed, the safety of the appliance is no longer guaranteed.

### **WARNING**

Children should be supervised to ensure that they do not play with the appliance.

## FOOD WARMER

### KEY FEATURES

- Insulated Stainless Steel Body
- Back Sliding Doors
- Toughened Glass Doors
- Removable Crumb Tray
- 3 Chrome Shelves



### TECHNICAL DATA SPECIFICATION

<b>DIMENSIONS</b>	Width	640mm
	Depth	360mm
	Height	630mm
<b>POWER</b>	Power	220-230V, 50-60Hz
		10 Amp
		1kW

## OPERATION

- Clean the appliance with a damp cloth, wipe it dry and put the foods into the appliance.
- Switch on the appliance.
- Note: When first used a smell is normal, it comes from the heating elements.
- Ensure the appliance is unplugged when it not in use, and when being cleaned.
- Before connecting the appliance, make sure that the crumb tray is in place.

## SAFETY NOTES

- The appliance may be used only in perfect condition by trained personnel.
- Use the appliance only on a stable, flat and heat-resistant surface and make sure that space exists for good air circulation. Ensure that no combustible materials are situated near an operating appliance.
- Do not use the appliance outdoors.
- The appliance may be connected to a grounded socket only. Do not connect any other appliance to the same socket. The outlet must be easily accessible, so that the plug can easily be removed in the case of an emergency.
- Always pull on the plug and not on the cable, if you pull the plug from the socket, switch off the appliance before.
- The cable must not hang over table edges and/or sharp edges. It also must not come into contact with the hot appliance surface or with water.
- Regularly check the cable. If it is damaged, it must be exchanged by a qualified specialist.
- Do not leave the food warmer unattended while it is in use. Children are not able to realize dangers when handling electronic appliances.
- Be careful as outer surfaces may become hot during operation.
- Do not move the food warmer when in use or if food products are within.
- Ensure to switch off the appliance before cleaning or repair. Clean surfaces with a soft damp cloth.
- The appliance must not be hosed down with water or placed into water.
- Do not attempt to repair the appliance by yourself. Repairs may only be undertaken by a qualified specialist.

## CLEANING

- For hygiene reasons, the food warmer should be cleaned daily.
- Switch off the appliance and allow it to cool down.
- Use a damp cloth with a mild, non-abrasive, detergent and wipe it dry.
- Never immerse the appliance into water.
- Never wash it by water jet.

### **This appliance is intended to be used in applications such as:**

- Staff kitchen areas in shops, offices and other working environments.
- Staff kitchen areas in cafés and restaurants.
- By clients in hotels, motels and other similar environments.
- Bed and breakfast type environments.
- Not for home use.

#### **WARNING**

Wait until the unit has cooled to a safe temperature before undertaking any cleaning or maintenance. Contact with hot surfaces can cause burns and serious injury.

#### **WARNING**

This unit is NOT waterproof, do NOT hose. DO NOT pour water directly onto the unit. DO NOT immerse in water.



FOR MORE INFORMATION, OR TO RE-ORDER, PLEASE CONTACT OUR DISTRIBUTORS.

---

**New Zealand**  
Southern Hospitality  
[southernhospitality.co.nz](http://southernhospitality.co.nz)  
NZBN - 9429039301956

**Australia**  
Reward Hospitality  
[rewardhospitality.com.au](http://rewardhospitality.com.au)  
ABN - 40010183669