



pro.equip



User Guide

MILKSHAKE MAKER

ESM17 / 4007061

Proudly Distributed By

New Zealand
Southern Hospitality
southernhospitality.co.nz
NZBN - 9429039301956

Australia
Reward Hospitality
rewardhospitality.com.au
ABN - 40010183669

TABLE OF CONTENTS

General Precautions.....	4
Specifications.....	5
Operation.....	6
Cleaning.....	7
Replacing Agitator.....	8
Disposal.....	8

This instruction booklet contains important advice for operation and maintenance. Please keep the booklet in a safe place for future reference.

GENERAL PRECAUTIONS—IMPORTANT

Please read carefully the following instructions before using the milkshake maker.

- Plug into a grounded outlet
- Do not use an adapter
- Do not use an extension cord
- Disconnect power before cleaning or servicing, and before installing or removing agitator.
- Do not spray or submerge mixer
- Always use metal container provided when mixing
- Do not put spoon or other utensils in metal container when mixing
- Do not allow agitator to hit container sides when mixing
- Inspect mixer and agitator daily
- Replace agitators only if required
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is damaged in any manner
- If the supply cord of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person.



Electrical Shock Hazard. Plug into a grounded outlet. Do not remove ground. Do not use an adapter. Do not use an extension cord. Disconnect power before cleaning mixer. Failure to follow these instructions can result in death, fire, or electrical shock.



Cut Hazard. Disconnect power before installing or removing agitator. Always use metal container when mixing. Do not put hands, spoons, or other utensils in metal container when mixing. Failure to follow these instructions can result in serious injuries or cuts.

WARNING

Children should be supervised to ensure that they do not play with the appliance.

MILKSHAKE MAKER

KEY FEATURES


- **Commercial Ball Bearing Motor**
- **Stainless Steel Axis & Jug**
- **Polycarbonate Mixing Head**
- **Heavy Base**
- **2 Speeds - 10,000 & 15,000rpm**



TECHNICAL DATA SPECIFICATION

TECHNICAL DATA SPECIFICATION		
DIMENSIONS	Width	208mm
	Depth	158mm
	Height	500mm
POWER	Power	220-240V, 50-60Hz
		10 Amp
		400 Watt




OPERATION

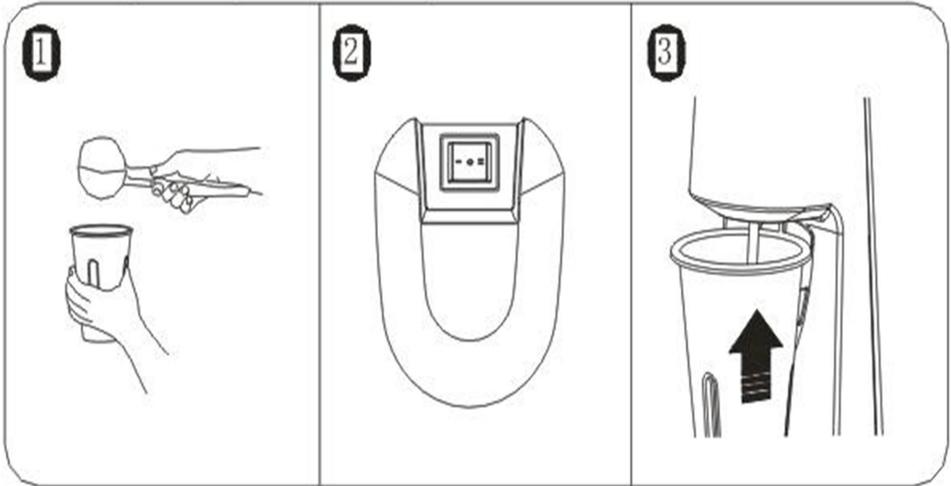


WARNING

To avoid damage, do not lift mixer by the shaft.

CLEANING

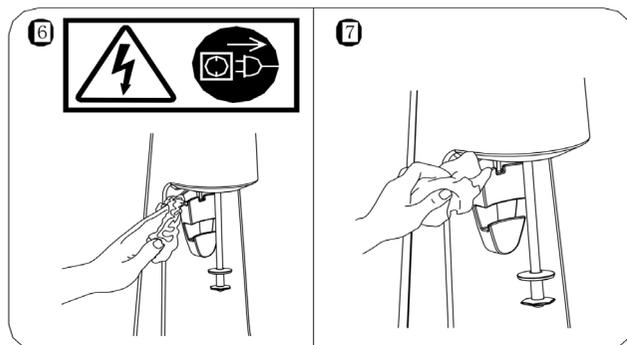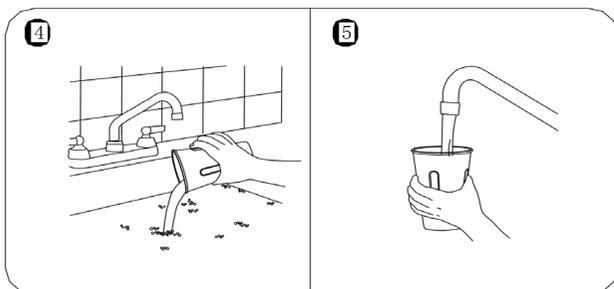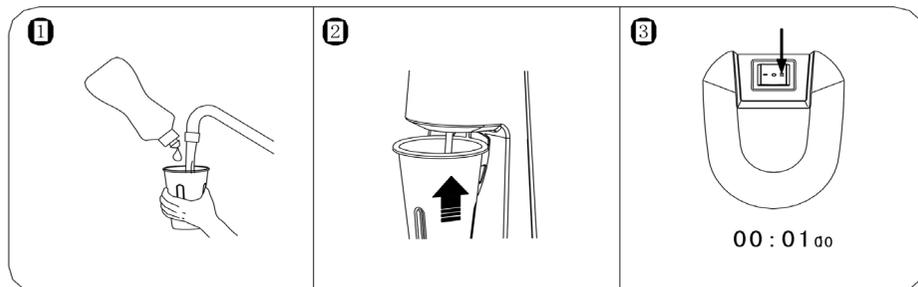

REPLACING AGITATOR

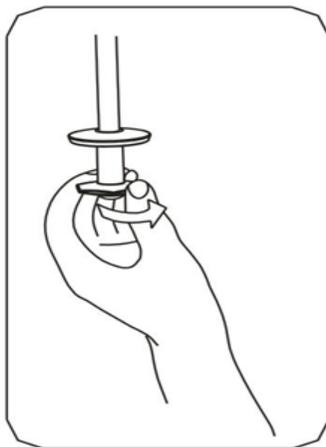

DISPOSAL

- Please do not dispose electrical equipment as ordinary waste.
- Help conserve natural resources and protect the environment: when you have finished using this product, please dispose of it at your local waste collection or recycling centre in the area reserved for electrical equipment. Contact your local authority to find the nearest waste collection centre.
- To remind you to dispose of this product responsibly and separately from ordinary waste, it is marked with the symbol of a crossed-out trash bin.



THIS PAGE HAS BEEN LEFT INTENTIONALLY BLANK



FOR MORE INFORMATION, OR TO RE-ORDER, PLEASE CONTACT OUR DISTRIBUTORS.

New Zealand
Southern Hospitality
southernhospitality.co.nz
NZBN - 9429039301956

Australia
Reward Hospitality
rewardhospitality.com.au
ABN - 40010183669