



User Guide

WAFFLE MAKER

ESM2 / 4007086

Proudly Distributed By

New Zealand
Southern Hospitality
southernhospitality.co.nz
NZBN - 9429039301956

Australia
Reward Hospitality
rewardhospitality.com.au
ABN - 40010183669

TABLE OF CONTENTS

General Precautions.....	4
Specifications.....	5
Cooking Function Signals	6
Operation.....	6
Troubleshooting.....	6
Cleaning Instructions	7

This instruction booklet contains important advice for operation and maintenance. Please keep the booklet in a safe place for future reference.

GENERAL PRECAUTIONS—IMPORTANT

Please read carefully the following instructions before using the waffle maker.

The grill is capable of reaching very high temperatures. Follow all safety procedures to avoid injury.

- Never touch the grilling surface while the power is on or the cooking surface is hot.
- Never use pots and pans on the grill surface. The grill surface was designed to cook waffles, not to heat pots.
- Never place foil or plastic on the grill surface.
- The waffle maker was designed to prepare food, don't use it for any other purpose.
- Before using the waffle maker for the first time it should be "Burned In".
- First, wash the grill surface with soap and water then dry it thoroughly.
- Use the handle to raise and lower the top of the waffle maker to avoid injury.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WARNING

Children should be supervised to ensure that they do not play with the appliance.

WAFFLE MAKER

KEY FEATURES

- **Stainless Steel Body**
- **Temperature Control**
- **High Production Output**
- **Quick Preheat Time**
- **Easy To Clean**



TECHNICAL DATA SPECIFICATION

DIMENSIONS	Width	260mm
	Depth	440mm
	Height	260mm
POWER	Power	220–240V, 50–60Hz
		10 Amp
		1kW

COOKING FUNCTION SYMBOLS

- **Green Light** – When the switch light is on, the grill is being supplied power.
- **Thermostat Control Dial** – Turn the dial clockwise to set the desired grilling temperature.

OPERATION

- The waffle maker preheats in just minutes. To preheat the grill, simply set the desired cooking temperature and close the top. Your grill will be preheated and ready to start cooking in about 2 or 3 minutes.
- Waffles will usually take between 2 – 5 minutes to heat throughout. The cooking time depends upon the ingredients you have chosen for your waffle.
- Most of your waffles will be grilled at temperatures between 250°C and 280°C.
- Light pressure is all you need when lowering the top grill to assure a perfectly cooked waffle. Excessive pressure will not speed up the cooking process and product quality may be compromised.
- To keep your grill clean between waffles, simply wipe the grill surfaces with a clean oiled paper towel.

TROUBLESHOOTING

- If there is any unusual change in the operation of your waffle maker, turn it off and disconnect the power immediately. Have a qualified electrician perform any necessary repairs before using the waffle maker again.
- The waffle maker is designed to allow the operator to place frozen foods directly on the heated grill surface without causing damage.

CLEANING INSTRUCTIONS

- The waffle maker may be quickly cleaned with a damp cloth.
- There are many non-abrasive cleaners for cooking tops on the market today. We suggest using your choice of non-abrasive cleaner at the end of each day or service period to keep your waffle maker in top condition.
- Never use a spray of water or immerse the grill in water as this has the potential to damage the electrical components.

This appliance is intended to be used in applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- Staff kitchen areas in cafés and restaurants.
- By clients in hotels, motels and other similar environments.
- Bed and breakfast type environments.
- Not for home use.

WARNING

Wait until the unit has cooled to a safe temperature before undertaking any cleaning or maintenance. Contact with hot surfaces can cause burns and serious injury.

WARNING

This unit is NOT waterproof, do NOT hose. DO NOT pour water directly onto the unit. DO NOT immerse in water.



FOR MORE INFORMATION, OR TO RE-ORDER, PLEASE CONTACT OUR DISTRIBUTORS.

New Zealand
Southern Hospitality
southernhospitality.co.nz
NZBN - 9429039301956

Australia
Reward Hospitality
rewardhospitality.com.au
ABN - 40010183669